

Mount Selection Guide for Positioning Systems

ESPRIT®, EXSITE®, LEGACY®

ESPRIT

Esprit Model	EWM Wall	PM2000, PM2010 Pedestal	EPM Pole	PP100 Parapet	PP300L/PP301L Parapet	PP4348 Parapet	ECM100 Corner
Basic ES3012-2, ES3012-5 ES3012-2N, ES3012-5N ES3012-2W, ES3012-5W	X (included)	X ♦ X	X ✱	X ✱	X ■	X ■	X ✱
ES30C/ES31C Series -2N/-5N models (pedestal) -2W/-5W models (wall)	(included)	X	X	X	X +	X +	X
ES30PC/ES31PC Series -2N/-5N models (pedestal) -2W/-5W models (wall)	(included)	X	X	X	X +	X +	X
ES30xxTI Series -2N/-5N models (pedestal) -2W/-5W models (wall)	(included)	X	X	X	X +	X +	X

♦ Must be used with EPP pedestal adapter.

✱ Must be used with EWM wall mount.

■ Must be used with EWM wall mount EA4348 adapter.

+ Must be used with EA4348 adapter.

Note: Models with “W” suffix in part number include EWM wall mount, and models with “N” suffix include EPP pedestal adapter.

EXSITE

ExSite Model	WXM100 Wall	PXM100 Pedestal	PAXM100 Pole	CMXM100 Corner
EHM _{xx} C22-2, EHM _{xx} C22-2X	X	X	X*	X*†
EHM _{xx} C22-7, EHM _{xx} C22-7X	X	X	X*	X*†
EHM _{xx} CBW23-7, EHM _{xx} CBW23-7X	X	X	X*	X*†
IPSM _{xx} C22-2, IPSM _{xx} C22-2X	X	X	X*	X*†
IPSM _{xx} C22-7, IPSM _{xx} C22-7X	X	X	X*	X*†
IPSM _{xx} CBW23-2, IPSM _{xx} CBW23-2X	X	X	X*	X*†
IPSM _{xx} CBW23-7, IPSM _{xx} CBW23-7X	X	X	X*	X*†

* Must be used with WXM100 for vertical pole application or with PXM100 for horizontal pole application.

† Must be used with WXM100 wall mount.

LEGACY

Legacy Model	LWM41 Wall	PM2000, PM2010 Pedestal	PA402 Pole	PP300L, PP301L Parapet	PP400 Parapet	PP4348 Parapet	CM400 Corner
PT780 Series P/T	X	X ★	X ☆	X ☆	X ☆	X ☆	X ☆

★ Must be used with PA2000 pedestal adapter.

☆ Must be used with LWM41 wall mount.