


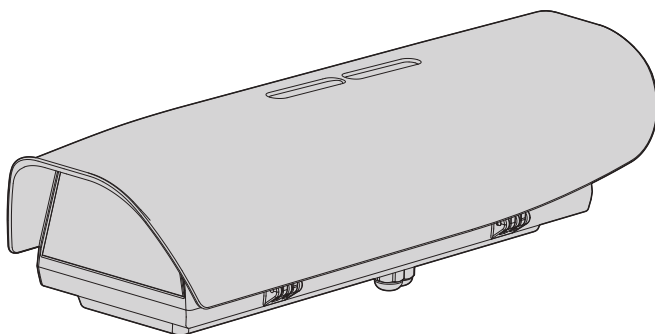

HOV Installation Manual

Contents

1 About this manual	4
1.1 Typographical conventions	4
2 Notes on copyright and information on trademarks	4
3 Safety rules	4
4 Identification	5
4.1 Product description and type designation	5
4.2 Product marking label	5
5 Preparing the product for use	6
5.1 Unpacking	6
5.2 Contents	6
5.3 Safely disposing of packaging material	6
5.4 Preparatory work before installation	6
5.4.1 Mounting the bracket	6
6 Installation	6
6.1 Housing opening	6
6.2 How to install the camera	7
6.3 Board description	7
6.4 Connecting the power supply	8
6.5 Installation of the version with double filter for air renewal	8
6.6 Installation of the version with wiper	9
6.7 Desiccant bag	9
7 Accessories	9
7.1 Heater	9
7.1.1 Heater installation	9
7.2 Camera power supply	10
7.2.1 Camera power supply installation	10
7.3 Blower	11
7.3.1 Blower installation	11
8 Instructions for normal operation	11
9 Cleaning	11
9.1 Cleaning the window and plastic parts	11
10 Information on disposal and recycling	11
11 Technical data	12
11.1 General	12
11.2 Mechanical	12
11.3 Electrical	12
11.4 Environment	12
11.5 Certifications	12
12 Technical drawings	13

1 About this manual

Read all the documentation supplied carefully before installing and using this product. Keep the manual in a convenient place for future reference.

1.1 Typographical conventions



DANGER!

High level hazard.

Risk of electric shock. Disconnect the power supply before proceeding with any operation, unless indicated otherwise.



CAUTION!

Medium level hazard.

This operation is very important for the system to function properly. Please read the procedure described very carefully and carry it out as instructed.



INFO

Description of system specifications. We recommend reading this part carefully in order to understand the subsequent stages.

2 Notes on copyright and information on trademarks

The mentioned names of products or companies are trademarks or registered trademarks.

3 Safety rules



CAUTION! Device installation and maintaining must be performed by specialist technical staff only.



CAUTION! The electrical system to which the unit is connected must be equipped with an automatic bipolar circuit breaker. The circuit breaker for main supply voltage phase units must have a level of intervention of 20A max. The circuit breaker for low voltage units must have a level of intervention of 6A max. This circuit breaker must be of the Listed type. The minimum distance between the circuit breaker contacts must be 3mm (0.1in). The circuit breaker must be provided with protection against the fault current towards the ground (differential) and the overcurrent (magnetothermal).

- The manufacturer declines all responsibility for any damage caused by an improper use of the appliances mentioned in this manual. Furthermore, the manufacturer reserves the right to modify its contents without any prior notice. The documentation contained in this manual has been collected and verified with great care. The manufacturer, however, cannot take any liability for its use. The same thing can be said for any person or company involved in the creation and production of this manual.
- Before starting any operation, make sure the power supply is disconnected.
- Be careful not to use cables that seem worn or old.
- Never, under any circumstances, make any changes or connections that are not shown in this handbook. Improper use of the appliance can cause serious hazards, risking the safety of personnel and of the installation.
- Use only original spare parts. Non-original spare parts could cause fire, electrical discharge or other hazards.
- Before proceeding with installation, check the supplied material to make sure it corresponds to the order specification by examining the identification labels (4.2 Product marking label, page 5).

- This device was designed to be permanently secured and connected on a building or on a suitable structure. The device must be permanently secured and connected before any operation.
- Comply with all the national standards during the device installation.
- Installation category (also called Overvoltage Category) specifies the level of mains voltage surges that the equipment will be subjected to. The category depends upon the location of the equipment, and on any surge voltage protection provided. Equipment in an industrial environment, directly connected to major feeders/short branch circuits, is subjected to Installation Category III. If this is the case, a reduction to Installation Category II is required. This can be achieved by use of an insulating transformer with an earthed screen between primary and secondary windings, or by fitting UL listed Surge Protective Devices (SPDs) from live to neutral and from neutral to earth. Listed SPDs shall be designed for repeated limiting of transient voltage surges and the following rated operation conditions: Type 2 (SPDs permanently connected to the power network and intended for installation on the load side of the service equipment); Nominal Discharge Current (In) 20kA min. For example: FERRAZ SHAWMUT, STT2240SPG-CN, STT2BL240SPG-CN rated 120Vac/240Vac, (In=20kA). Maximum distance between installation and reduction is 5m.
- Any device which could be installed inside the product must comply with the current safety rules.
- For all connections, use cables that are able to withstand temperatures of at least 75°C (167°F).
- The product is designed to house only cameras that are properly certified according to IEC/UL 60950-1 or IEC/UL 62368-1 (7W max).

- A power disconnect device must be included in the electrical installation, and it must be very quickly recognizable and operated if needed.

4 Identification

4.1 Product description and type designation

Robust aluminium housing designed to simplify the installation and service, and guarantee total protection against all environmental conditions.

Its size makes it ideal for housing various combinations of standard cameras with fixed or compact zoom lenses.

Very easy to install thanks to the side-opening system that allows the full access to the camera, lenses and all internal connections.

The numerous available accessories, like heater, camera power supply, blower and air filter, wiper and washer can satisfy any installation application.

4.2 Product marking label

See the label attached to the product.

5 Preparing the product for use



Any change that is not expressly approved by the manufacturer will invalidate the warranty.

5.1 Unpacking

When the product is delivered, make sure that the package is intact and that there are no signs that it has been dropped or scratched.

If there are obvious signs of damage, contact the supplier immediately.

When returning a faulty product we recommend using the original packaging for shipping.

Keep the packaging in case you need to send the product for repairs.

5.2 Contents

Check the contents to make sure they correspond with the list of materials as below:

- Housing
- Housing equipment:
 - Allen wrench
 - Spacers
 - Cable glands gaskets
 - Cable glands (x3)
 - Bolts and screws
- Instruction manual
- Desiccant bag

5.3 Safely disposing of packaging material

The packaging material can all be recycled. The installer technician will be responsible for separating the material for disposal, and in any case for compliance with the legislation in force where the device is to be used.

5.4 Preparatory work before installation

5.4.1 Mounting the bracket



The product must be fastened with suitable equipment. The fastening means must guarantee mechanical sealing when a force equal to at least 4 times the weight of the device is applied.

6 Installation

6.1 Housing opening

Loosen the 2 screws on the side, turn the cover and the upper half of the body about the opening hinge axis.

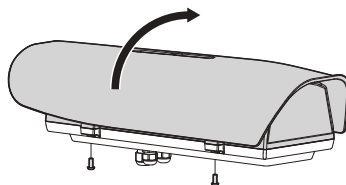


Fig. 1



After installation and wiring, close the product.

6.2 How to install the camera



Power supply can be provided by the board supplied with the product. Make sure the voltage values are appropriate.

Open the housing as described in the relative chapter (6.1 Housing opening, page 6).

Partially loosening the fastening screws (01).

Remove the internal slide (02) by sliding it until the holes coincide with the slide fastening screws.

Fasten the camera with the 1/4" screw (03). To position the camera and lens correctly, if necessary, use the supplied spacers. (04).

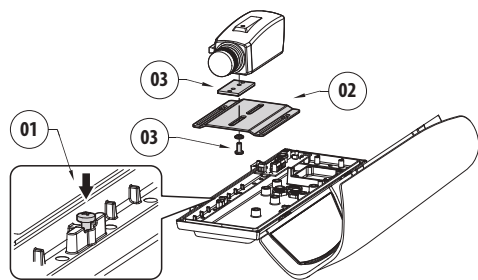


Fig. 2

Reposition the internal slide and tighten the screws that had been loosened previously.

Remove the conductors protective sheathing and connect them to terminal (J5, 6.3 Board description, page 7).

The camera's power supply cable conductors must be tied up with a cable tie next to the terminal. Keep the signalling and power supply cables separated from each other.

6.3 Board description



The board may appear different to that illustrated.



Depending on the product version, the board may not be equipped with all functions.

BOARD DESCRIPTION		
Connector	Function	Notes
J1	Power supply for the board (V_{IN})	
J2	Auxiliary output (V_{OUT})	Same voltage applied on J1
J3	Heater power supply	
J4	Tamper switch contacts	Only some models
J5	Camera power supply (V_{OUT})	Depending on the power supply model the two connectors have different use. If powered in 12vdc connector A corresponds to polarity +, while connector B corresponds to polarity - . If powered in 24vac connectors A and B are equivalent and correspond to the voltage Vac.
J7	Power supply connector/jumper	Jumper present only in ventilated models
J8	Fan power supply	
SW1	Tamper switch	Only some models

Tab. 1

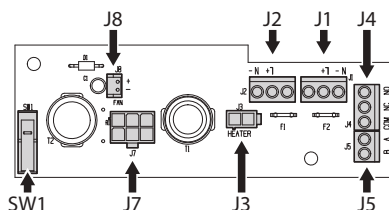


Fig. 3



Nominal section of the cables used: from 0.2mm² (24AWG) up to 2.5mm² (13AWG).

6.4 Connecting the power supply



CAUTION! The type of cable used must be compatible with the planned use. Comply with the national regulations in force on electrical installation.



Connect the safety earth to the relative terminal of the J1 connector.



Earth cable should be about 10mm longer than the other two, so that it will not be disconnected accidentally if pulled.

Insert the cables inside the housing using the cable glands. The cable glands are suitable for conductors with diameters of between 5mm and 10mm. The section of the cable inside the housing must be sufficiently long to allow connection. Suitably lock the cable glands.

Remove the conductors protective sheathing and connect them to terminal (J1, 6.3 Board description, page 7).

To guarantee weatherproof protection, install the housing on the support following the inclination limits as shown in the picture.

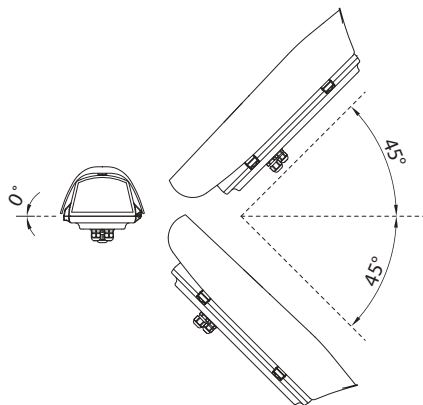


Fig. 4 Maximum tilt of the transverse axis: 0°.
Maximum tilt of the longitudinal axis: $\pm 45^\circ$.

6.5 Installation of the version with double filter for air renewal



During installation pay attention to the orientation of the air inlet filter fins.

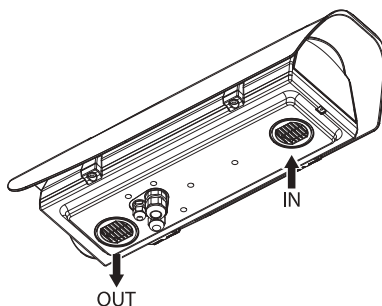


Fig. 5

Depending on the angle of inclination of the housing, the orientation of the filter fins must prevent water penetrating in case of rain:

To guarantee weatherproof protection, install the housing on the support following the inclination limits as shown in the picture.

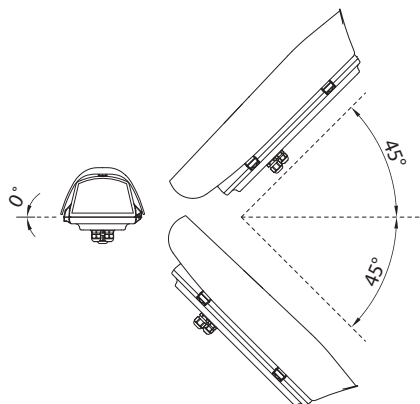


Fig. 6 Maximum tilt of the transverse axis: 0°.
Maximum tilt of the longitudinal axis: $\pm 45^\circ$.

6.6 Installation of the version with wiper

Open the housing as described in the relative chapter (6.1 Housing opening, page 6).

Identify the terminal of the wiper board.

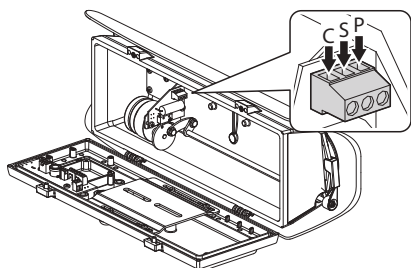


Fig. 7

Connect the wiper board to the power supply mains as shown in the figure.

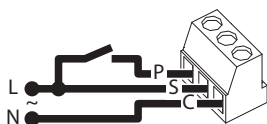


Fig. 8

i **Nominal section of the cables used: from 0.2mm² (24AWG) up to 2.5mm² (13AWG).**

Pressing the button activates the wiper. When the button is released the wiper blade will return to the rest position.

If you have a receiver with the Wiper control function, connect the SW, PER and COM terminals respectively to terminals S, P and C of the board.

6.7 Desiccant bag

Take the dessicant salt bag out of its pack and insert it into the product.

7 Accessories

i **For further details on configuration and use, refer to the relative manual.**

7.1 Heater

7.1.1 Heater installation

Open the housing as described in the relative chapter (6.1 Housing opening, page 6).

Fix the heater kit to the prearranged points on the body of the housing.

The pre-wired heating element (01) should be positioned between the 2 dissipators (02) before attachment to ensure contact and hence guarantee correct heat transmission.

Pass the heating wiring under the slide to fix the camera.

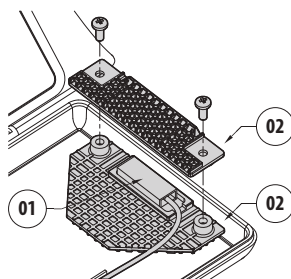


Fig. 9

At the end of installation, connect the wiring to the terminal (power supply connector, 6.3 Board description, page 7).

Reposition the internal slide and tighten the screws that had been loosened previously.

7.2 Camera power supply

7.2.1 Camera power supply installation



Not usable in housings with wiper device installed.



Pay attention to the voltage used to power the circuit. Depending on requirements use the correct power supply kit.

Usable power supplies:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT 12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

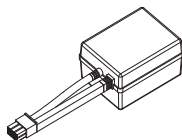


Fig. 10 Camera power supply.

Open the housing as described in the relative chapter (6.1 Housing opening, page 6).

Fix the support bracket (02) using the screw (01). Place the power supply (03) on the support bracket. Secure it all with the screws (04) and the corner fixing bracket (5).

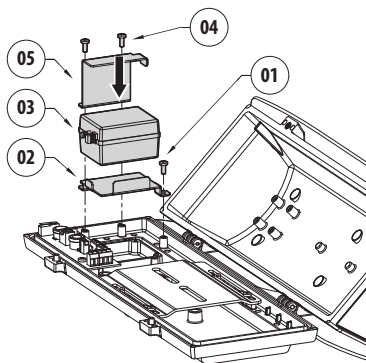


Fig. 11

Plug the multipolar female connector into the corresponding male connector (J7, 6.3 Board description, page 7).

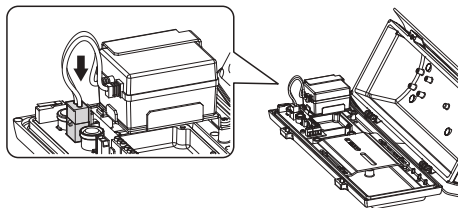


Fig. 12

7.3 Blower

7.3.1 Blower installation



Not usable in versions with double filter for air renewal and wiper.



Pay attention to the voltage used to power the circuit. Depending on requirements use the correct power supply kit.



The blower kit should be assembled according to the instructions to ensure a correct air circulation inside the housing.

Open the housing as described in the relative chapter (6.1 Housing opening, page 6).

Fix the blower using the corner bracket and screws.

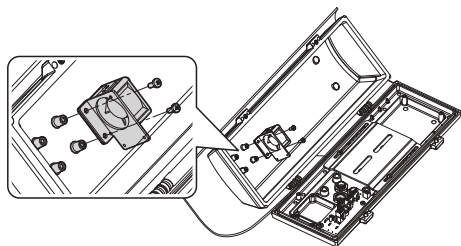


Fig. 13

Plug the multipolar female connector into the corresponding male connector (J8, 6.3 Board description, page 7).

8 Instructions for normal operation



Do not use the wiper if the ambient temperature is under 0°C or if there is ice.

9 Cleaning

9.1 Cleaning the window and plastic parts



Avoid ethyl alcohol, solvents, hydrogenated hydrocarbide, strong acid and alkali. Such products may irreparably damage the surface.

We recommend using a soft cloth with neutral soap diluted with water or specific products to clean the lenses.

10 Information on disposal and recycling

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) mandates that these devices should not be disposed of in the normal flow of municipal solid waste, but they should be collected separately in order to optimize the recovery stream and recycling of the materials that they contain and to reduce the impact on human health and the environment due to the presence of potentially hazardous substances.



The symbol of the crossed out bin is marked on all products to remember this.

The waste may be delivered to appropriate collection centers, or may be delivered free of charge to the distributor where you purchased the equipment at the time of purchase of a new equivalent or without obligation to a new purchase for equipment with size smaller than 25cm (9.8in).

For more information on proper disposal of these devices, you can contact the responsible public service.

11 Technical data

11.1 General

Constructed from aluminium

Sunshield in ABS

Epoxypolyester powder painting, RAL9002 colour

Stainless steel external screws

11.2 Mechanical

Internal usable dimensions (WxH): 100x70mm (3.9x2.7in)

Internal usable length (with or without accessories): 250mm (9.8in)

Cable glands: 3xM16

Extra clear glass window

- Dimensions (WxH): 118x75mm (4.6x2.95in)

Unit weight: 3kg (6.6lb)

11.3 Electrical

Supply voltage/Current consumption (empty version):

- From 12Vdc up to 24Vdc, 1A max
- From 12Vac up to 24Vac, 1A max, 50/60Hz
- From 120Vac up to 230Vac, 400mA max, 50/60Hz

Supply voltage/Current consumption (version with heater, Ton 15°C±3°C (59°F ±5°F), Toff 22°C±3°C (72°F±5°F)):

- From 12Vdc up to 24Vdc, 3A max
- From 12Vac up to 24Vac, 3A max, 50/60Hz
- From 120Vac up to 230Vac, 400mA max, 50/60Hz

Supply voltage/Current consumption (version with heater fan assistant, continuous duty):

- 12Vdc, 400mA max
- 24Vac, 200mA max, 50/60Hz

Supply voltage/Current consumption (version with wide-range power supply):

- From 100Vac up to 240Vac, 40mA max, 50/60Hz

Supply voltage/Current consumption (version with blower and thermostat for models with double filter for air renewal, Ton 35°C±3°C (95°F±5°F), Toff 20°C±3°C (71°F±5°F)):

- 12Vdc, 400mA max
- 24Vac, 200mA max, 50/60Hz
- 120Vac, 0.37A max, 50/60Hz
- 230Vac, 0.19A max, 50/60Hz

Supply voltage/Current consumption (version with integrated wiper):

- 24Vac, 1.85A max, 50/60Hz
- 230Vac, 40mA max, 50/60Hz

Camera power supply:

- IN from 100Vac up to 240Vac, 50/60Hz - OUT 12Vdc, 1.25A
- IN 230Vac, 50Hz - OUT 24Vac, 50Hz, 400mA

11.4 Environment

For indoors and outdoors installation

Operating temperature (with heater): from -20°C (-4°F) up to +65°C (149°F)

11.5 Certifications

Electrical safety (CE): EN60950-1, IEC60950-1, EN62368-1, IEC62368-1

Electromagnetic compatibility (CE): EN50130-4, EN61000-6-3, EN55032 Class B, FCC Part. 15 Class B, ICES-003 Class B (with wiper: EN61000-6-4, EN55032 Class A, FCC Part. 15 Class A, ICES-003 Class A)

Outdoor installation (CE): EN60950-22, IEC 60950-22

IP protection degree (EN60529):

- IP66/IP67 (with cable glands)
- IP66/IP67 (with bracket with internal cable channel, with sealing rings)
- IP55 (with bracket with internal cable channel)
- IP44 (with double filter for air renewal)

IK protection degree (EN62262):

- IK10: models HOV32K1A084, HOV32K2A084
- IK10 (except for the front glass): for all the other models

Salty fog resistance: to 1000 hours (ISO9227)

UL certification (except for versions with double filter for the air exchange, HOV32K1A018, HOV32K2A016, HOV32K2A017, HOV32K2A147, and the version with wiper 230Vac, HOV32K1A100): cULus Listed, TYPE 4X

12 Technical drawings



The indicated measurements are expressed in millimetres.

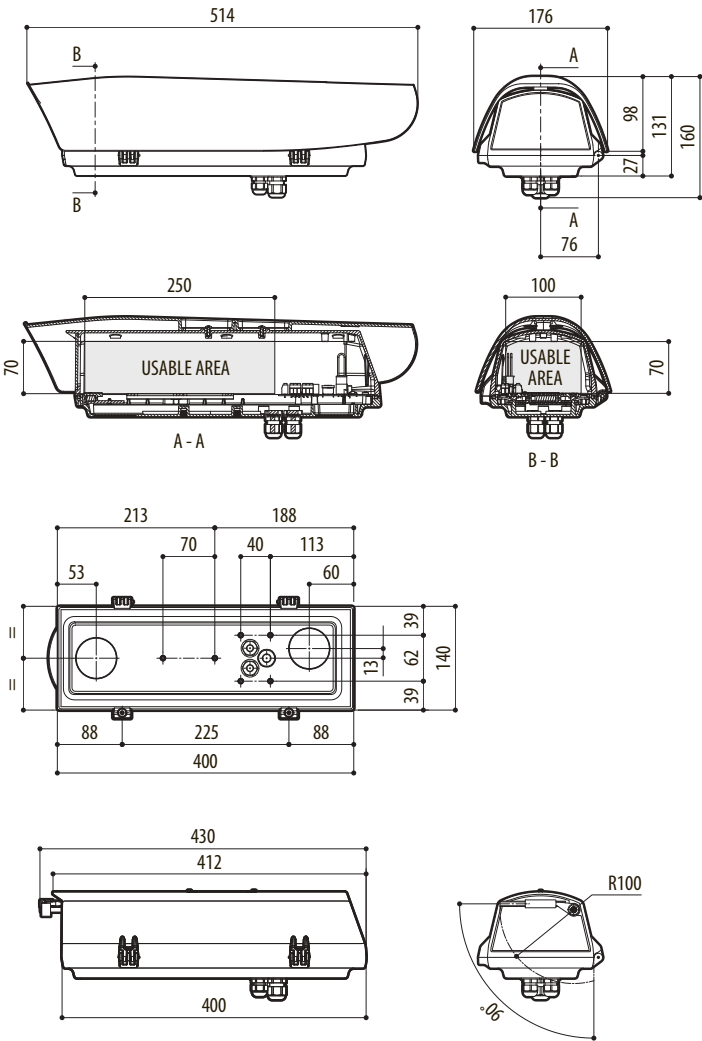


Fig. 14 HOV.



Pelco, Inc.
625 W. Alluvial Ave., Fresno, California 93711 United States
(800) 289-9100 Tel
(800) 289-9150 Fax
+1 (559) 292-1981 International Tel
+1 (559) 348-1120 International Fax
www.pelco.com

Pelco, the Pelco logo, and other trademarks associated with Pelco products referred to in this publication are trademarks of Pelco, Inc. or its affiliates. ONVIF and the ONVIF logo are trademarks of ONVIF Inc. All other product names and services are the property of their respective companies. Product specifications and availability are subject to change without notice.

© Copyright 2023, Pelco, Inc. All rights reserved.